


### 3 Phase 4 Wire Distribution Board

Neutral Connections

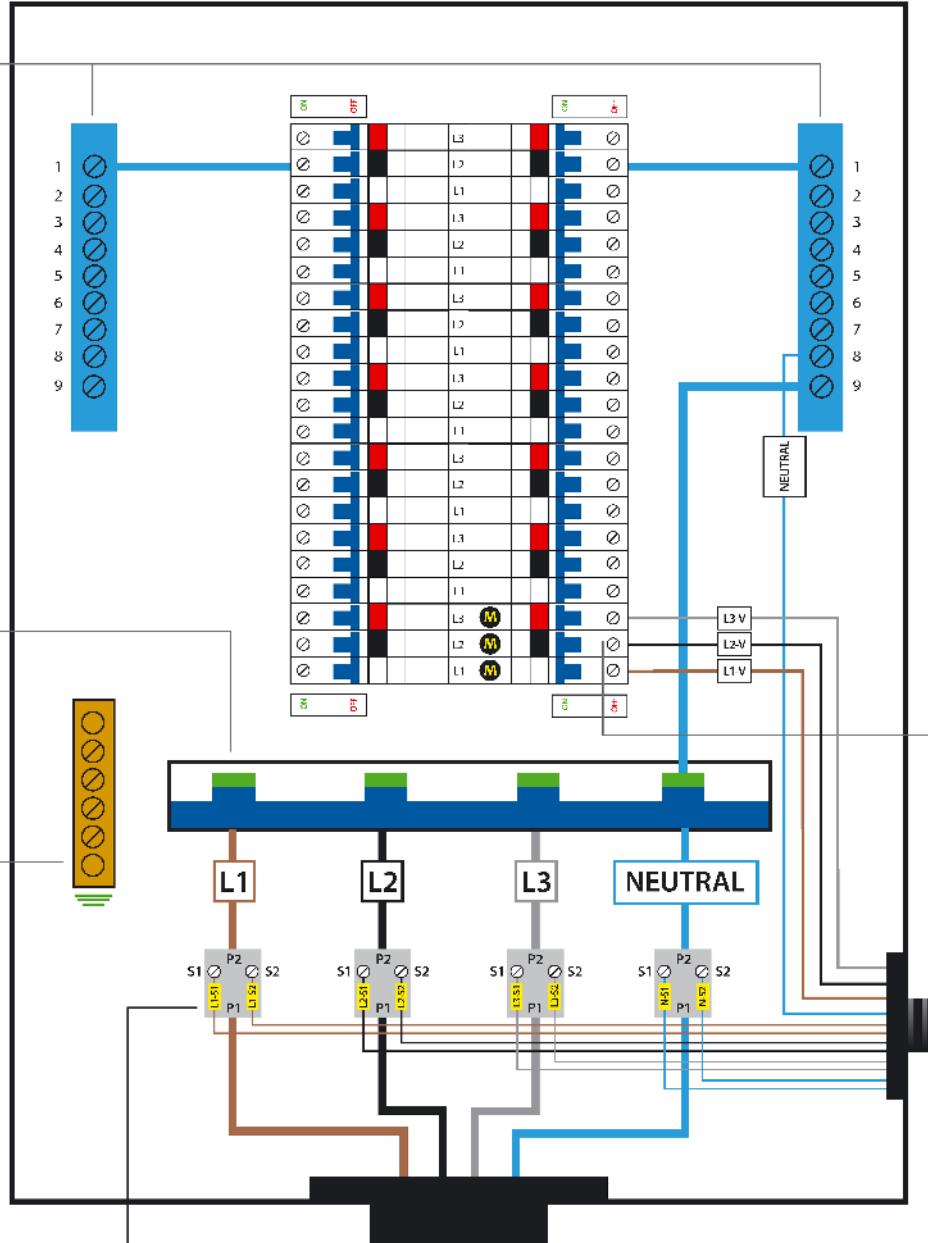

4 Pole Isolator Main Breaker

Earth Connections

Current Transformers

Mains Cable

**Neutral Current Transformer Optional**  
Only required if measuring Neutral Current

Three Phase Breaker to supply voltages to Meter

PX-5 Enclosure fitted with IC-5 Meter



Auxillary (Fused) Voltage Supply

2 Wires are supplied to loop into L1 Voltage and Neutral Terminals at the Meter

Plastic Conduit (25mm)