

A-100 Series

Single Phase Two Wires DIN rail Meter



User Manual U1.8

Warnings

Important Safety Information is contained in the Maintenance section. Familiarize yourself with this information before attempting installation or other procedures.

- Risk of Danger:** These instructions contain important safety information. Read them before starting installation or servicing of the equipment.
- Caution:** Risk of Electric Shock

1.Introduction

This document provides operating, maintenance and installation instructions for the A-100 series 1 phase 2 wire din rail mounted kWh meters. The A-100 range of meters has four models in the range Starting with the basic A-100P (Pulse Output) to the better communication meters A-100M, A-100MT (RS485 Modbus) and the A-100B (M-Bus). The Bi directional measurements makes the meter suitable for Active and reactive energy for all power monitoring applications including the new Solar PV requirements for measuring Energy. The A-100MT has the facility for being able to program four tariffs with its built in time switch for monitoring energy in different periods.

| Model | Measurements | Communication | Pulse Outputs | Multi Tariffs |
|----------|-----------------------------------------------------|-----------------|-----------------------------------|-----------------|
| A-100M | U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export | RS485 Modbus | 1: configurable 2: 1000imp/kwh | NO |
| A-100M-B | U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export | M-bus EN13757-3 | 1: configurable 2: 1000imp/kwh | NO |
| A-100P | U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export | NO | 1: configurable 2: 1000imp/kwh | NO |
| A-100MT | U, I, P, Q, PF, Hz, Dmd, kWh, kVarh, Import, Export | RS485 Modbus | 1: configurable 2: 1000imp/kwh | 4 Tariffs (RTC) |

1.1 Key Characteristics

- Bi-directional measure and display
- Multi-function measurements
- Two Pulse outputs
- RS485 Modbus / M-bus
- 100A direct connection
- Two module size (35mm)
- Password protected set-up
- Backlighted LCD
- Multi-tariff

1.2 Pulse output

The meter provides two pulse outputs. Both pulse outputs are passive type. Pulse output 1 can be set to generate pulses to represent total / import/export kWh or kVarh. The pulse constant can be set to generate 1 pulse per: 0.001(default) / 0.01/0.1/kWh/kVarh. Pulse width: 200/100/60ms Pulse output 2 is non-configurable. It is fixed up with active kWh (Imp). The constant is 1000imp/kWh.

1.3 RS485 Serial – Modbus RTU

Rs485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit. Set-up screens are provided for setting up the RS485 port.

1.4 Mbus for A-100M-B


This unit has an M-BUS serial port with M-BUS protocol to provide a means of remotely monitoring and controlling the Unit Set-up screens are provided for setting up the M-bus port.

1.5 4T by RTC for A-100MT

The internal clock circuit of this unit has time automatic switching function. Calendar, clock and rate can be set and adjustment through RS485, infrared interface. At least 4 tariffs and 10 time segments can be set within a natural day.

2.Operation

2.1 LCD Display

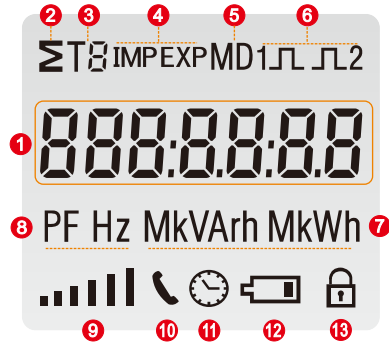

| NO. | Descriptions |
|-----|-------------------------------------------------|
| 1 | 7 digits used to display measured values or RTC |
| 2 | Total value |
| 3 | Tariff information |
| 4 | Import information, Export information |
| 5 | Max. Demand for Power or Current. |
| 6 | Pulse output 1 and Pulse output 2 |
| 7 | Measurement units |
| 8 | PF = power factor Hz = frequency |
| 9 | Bar display of Power |
| 10 | Communication indicator |
| 11 | Time information |
| 12 | Low battery warning |
| 13 | Lock symbol |

2.2 Initialization Display

| | |
|--|----------------------------------------------------------------------------------------|
| | All display segments light up, display check. |
| | Software version (please check the real software version on the product as the final). |
| | Modbus ID or Mbus Primary Address. |
| | Mbus Secondary Address (High) |
| | Mbus Secondary Address (Low) |
| | Baud rate. |
| | Total kWh. |

2.3 Scroll display by Buttons

After initialization and self-checking program, the meter display the measured values. The default page is total kWh. If the user wants to check other information, he needs to press the scroll button on the front panel.

The display order by scroll button :

*For A-100M:

Total kWh → Import kWh → Export kWh → total kVarh → Import kVarh → Export kVarh → Max. Power Demand → Voltage → Current → W → Var → VA → Power Factor → Frequency → Pulse Constant → Modbus ID → Baud Rate Display No: 1~3, 8~10, 15, 20~29.

*For A-100P:

Total kWh → Import kWh → Export kWh → Total kvarh → Import kVarh → Export kVarh → Max. Power Demand → Voltage → Current → W → Var → VA → Power Factor → Frequency → Pulse Constant Display No: 1~3, 8~10, 15, 20~27.

*For A-100M-B:

Total kWh → Import kWh → Export kWh → Total kVarh → Import kVarh → Export kVarh → Max. Power Demand → Voltage → Current → W → Var → VA → Power Factor → Frequency → Pulse Constant → Mbus Primary Address → Mbus Secondary Address → Baud Rate Display No: 1~3, 8~10, 15, 20~29.

*For A-100MT:

Total kWh → Import kWh → Export kWh → T1 kWh → T2 kWh → T3 kWh → T4 kWh → Total kVarh → Import kVarh → Export kVarh → T1 kVarh → T2 kVarh → T3 kVarh → T4 kVarh → Max. Power Demand → T1 Max. Power Demand → T2 Max. Power Demand → T3 Max. Power Demand → T4 Max. Power Demand → Voltage → Current → W → Var → VA → Power Factor → Frequency → Pulse Constant → Modbus ID → Baud Rate → Date → Time → Time Segment 1 → Time Segment 2 → Time Segment 3 → Time Segment 4 → Time Segment 5 → Time Segment 6 → Time Segment 7 → Time Segment 8 → Time Segment 9 → Time Segment 10 Display No: 1~41.

Scroll display by buttons:

| No. | Picture | Descriptions |
|-----|---------|---------------------------------------------------|
| 1 | | Total active energy Example: 70.00kWh |
| 2 | | Import(input) active energy Example: 50.00kWh |
| 3 | | Export(output) active energy Example: 20.00kWh |
| 4 | | T1 active energy Example: 10.00kWh |
| 5 | | T2 active energy Example: 10.00kWh |
| 6 | | T3 active energy Example: 30.00kWh |
| 7 | | T4 active energy Example: 20.00kWh |
| 8 | | Total reactive energy Example: 10.00kVarh |
| 9 | | Import(input) reactive energy Example: 5.00kVarh |
| 10 | | Export(output) reactive energy Example: 5.00kVarh |
| 11 | | T1 reactive energy Example: 2.00kVarh |
| 12 | | T2 reactive energy Example: 2.00kVarh |
| 13 | | T3 reactive energy Example: 2.00kVarh |
| 14 | | T4 reactive energy Example: 4.00kVarh |
| 15 | | Max Power Demand Example: 6938W |
| 16 | | T1 Max. Power Demand Example: 0 W |

| | | |
|------|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 17 | | T2 Max. Power Demand Example: 0 W |
| 18 | | T3 Max. Power Demand Example: 0 W |
| 19 | | T4 Max. Power Demand Example: 0 W |
| 20 | | Voltage Example: 229.8V |
| 21 | | Current Example: 30.156A |
| 22 | | Active Power Example: 4700W |
| 23 | | Reactive Power Example: 1030Var |
| 24 | | Apparent power Example: 4811VA |
| 25 | | Power factor Example: 1.000 |
| 26 | | Frequency Example: 49.99Hz |
| 27 | | Pulse 2 Constant Example: 1000 |
| 28 | | Modbus Address Example: 001 Mbus primary address Example: 001 |
| 28-1 | | Low bit of MBUS Secondary address (Default 00 01) Example: if the Secondary address high bit is 0000, low bit is 0001, that means the integral Secondary address is 00 00 00 01 |
| 29 | | Baud rate Example: 9600 |
| 30 | | Date Format: Day, Month, Year Example: 1st, Jan, 2015 |
| 31 | | Time Format: Hour, Minute, Second Example: 00:02:39 |
| 32 | | Time segment 1 Format: Hour:Minute, Tariff Example: 00:00, Tariff 1 |
| 33 | | Time segment 2 Format: Hour:Minute, Tariff Example: 02:00 Tariff 2 |

| | | |
|----|--|------------------------------------------------------------------------|
| 34 | | Time segment 3 Format:Hour:Minute,Tariff Example:04:00 Tariff 3 |
| 35 | | Time segment 4 Format:Hour:Minute,Tariff Example:05:00 Tariff 4 |
| 36 | | Time segment 5 Format:Hour:Minute,Tariff Example:07:25 Tariff 1 |
| 37 | | Time segment 6 Format:Hour:Minute,Tariff Example:08:11 Tariff 2 |
| 38 | | Time segment 7 Format:Hour:Minute,Tariff Example:15:40 Tariff 3 |
| 39 | | Time segment 8 Format:Hour:Minute,Tariff Example:17:00 Tariff 4 |
| 40 | | Time segment 9 Format:Hour:Minute,Tariff Example:19:00 Tariff 1 |
| 41 | | Time segment 10 Format:Hour:Minute,Tariff Example:23:00 Tariff 2 |

2.4 Set-up Mode

To get into Set-up Mode, the user needs to press the "Enter" button for 3 seconds.

| | | |
|-----|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | The setting is done correctly |
| | | The entering information is wrong. The operation fails. |
| 1 | | Password To get into Set-up mode, it asks a password confirmation. Default password: 1000 |
| 2 | | Address For Modbus: Default ID is 001 Range: 001~247 For Mbus: Primary Address ID Default ID is 001 Range:001~250 |
| 2-1 | | Press the "Enter" button, the first digit flash.Press the "Scroll" button to change the value. After choose the new address value, the user need pressing the "Enter" button to confirm the setting. |
| 2-2 | | High bit of MBUS Secondary address(Default 00 00) |
| | | Low bit of MBUS Secondary address(Default 00 01) Example: if the Secondary address high bit is 0000,low bit is 0001, that means the integral Secondary address is 00 00 00 01 |
| 2-3 | | Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choose the new value, the user need pressing the "Enter" button to confirm the setting. |
| 3 | | Baud rate for Modbus Default value: 2400bps Range: 1200, 2400, 4800, 9600bps. Baud rate for Mbus: Default value: 2400bps Range:300, 600, 1200, 2400, 4800, 9600bps. |
| 3-1 | | Press the "Enter" button, the red digit flash.Press the "Scroll" button to change the value. After choose the new baud rate, the user need pressing the "Enter" button to confirm the setting. |

| | | |
|------|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | | Parity Default: None Option: None, Even, Odd |
| 4-1 | | Press the "Enter" button, the red part flash. Press the "Scroll" button to change the option. After choose the new Parity, the user need pressing the "Enter" button to confirm the setting. |
| 5 | | Pulse Output 1 Default: kWh Option:kWh / KVarh / Imp. kWh / Exp. kWh / Imp.kVarh / Exp.kVarh |
| 5-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new Pulse output option, the user need pressing the "Enter" button to confirm the setting. |
| 6 | | Pulse Constant Default: 1000 Option: 1000 / 100 / 10 / 1 |
| 6-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new Pulse constant option, the user need pressing the "Enter" button to confirm the setting. |
| 7 | | Pulse duration Default: 100ms Option: 200 / 100 / 60ms |
| 7-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new Pulse duration option, the user need pressing the "Enter" button to confirm the setting. |
| 8 | | Demand Integration Time Default: 15 minutes Option: off(0) / 5 / 10 / 15 / 30 / 60 |
| 8-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new DIT option, the user need pressing the "Enter" button to confirm the setting. |
| 9 | | Automatic Scroll Time Interval Default: 0 S Option: 0 ~ 30S |
| 9-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new "Scrl" option, the user needs to press the "Enter" button to confirm the setting. |
| 10 | | Password set-up Default: 1000 |
| 10-1 | | Press the "Enter" button, the red part flash.Press the "Scroll" button to change the option. After choose the new "Scrl" option, the user needs to press the "Enter" button to confirm the setting. |
| 11 | | Date set-up Press the "Enter" button to enter the date set-up page. |
| 11-1 | | Press the "Scroll" button to change the value. After choose the new value, the user need pressing the "Enter" button to confirm the setting. Date format:Day,Month,Year |
| 12 | | Time set-up Press the "Enter" button to enter the time set-up page |
| 12-1 | | Press the "Scroll" button to change the value. After choose the new value, the user need pressing the "Enter" button to confirm the setting. Time format:Hour:Minute:Second |

3.Specifications

3.1 Accuracy

| | |
|-----------------|------------------------------------------|
| Voltage | 0.5% of range maximum |
| Current | 0.5% of nominal |
| Frequency | 0.2% of mid-frequency |
| Active power | 1% of range maximum |
| Reactive power | 1% of range maximum |
| Apparent power | 1% of range maximum |
| Active energy | Class 1 IEC62053-21 Class B EN50470-3 |
| Reactive energy | 1%of range maximum |

3.2 General Specifications

| | |
|---------------------------|----------------------------------------------------------|
| Voltage AC (Un) | 230V |
| Voltage Range | 176~276V AC |
| Base Current (Ib/Iref) | 5A |
| Max. Current (Imax) | 100A |
| Mini Current (Imin) | 0.25A |
| Starting current | 0.4% of Ib/Iref |
| Power consumption | <2W/10VA |
| Frequency | 50Hz(for MID version) 50/60Hz±2%(for non-MID version) |
| AC voltage withstand | 4KV for 1 minute |
| Impulse voltage withstand | 6KV-1.2uS waveform |
| Over current withstand | 30Imax for 0.01s |
| Pulse 1 output rate | configurable, default 1000i/kWh |
| Pulse 2 output rate | non-configurable, 1000i/kWh |
| Display | LCD with backlit |
| Max. Reading | 99999.99kWh |


3.3 Environment

| | |
|------------------------------------|-----------------------------|
| Operating temperature | -25°C to +55°C |
| Storage/transportation temperature | -40°C to +70°C |
| Reference temperature | 23°C ± 2°C |
| Relative humidity | 0 to 95%, non-condensing |
| Installation category | CAT II |
| Mechanical Environment | M1 |
| Electromagnetic environment | E2 |
| Degree of pollution | 2 |

*Maximum operating and storage temperatures are in the context of typical daily and seasonal variation.

3.4 Pulse Output

The pulse output 1 can be set to generate pulses to represent total kWh, total kVarh, import kWh, export kWh, import kVarh, export kVarh.
Constant can be set to 1000/100/10/1 impulse per kWh or Kvarh. Pulse width 200/100/60ms.



ATTENTION: Pulse output must be fed as shown in the wiring diagram below. Scrupulously respect polarities and the connection mode. Opto-coupler with potential-free SPST-NO Contact. Contact range:5~27VDC Max. current Input:27mADC.

3.5 RS485 output for Modbus RTU

The meter provides a RS485 port for remote communication. Modbus RTU is the protocol applied. For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu.
Baud rate: 1200, 2400, 4800, 9600
Parity: NONE/EVEN/ODD
Stop bits: 1 or 2
Modbus Address: 1 to 247


3.6 Mbus

The meter provides a M-bus Port for remote communication. the meter adopts EN1434-3 Mbus communication protocol. The communication parameters can be configured via the SET-UP mode.
Baudrate: 300, 600, 1200, 2400, 4800, 9600
Parity: None/Odd/Even
Stop bit: 1 or 2
Primary address: 001~250
Secondary address: 00000001~99999999

3.7 Mechanics

| | |
|---------------------|-----------------------------------|
| Din rail dimensions | 35x92x65 (WxHxD) Per DIN 43880 |
| Mounting | DIN rail 35mm |
| Sealing | IP51 (indoor) |
| Material | self-extinguishing UL94V-1 |


4.Dimensions

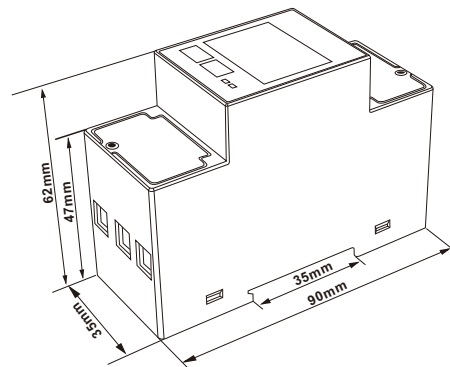

Declaration of Conformity(for the MID approved version meter only)


We Autometers Systems Ltd.
Declare under our sole responsibility as the manufacturer that the poly phase multifunction electrical energy meter "A-100 series" correspond to the production model described in the EC-type examination certificate and to the requirements of the Directive 2004/22/EC EC type examination certificate number 0120/SGS0186. Identification number of the NB0120

5.Installation and sealing

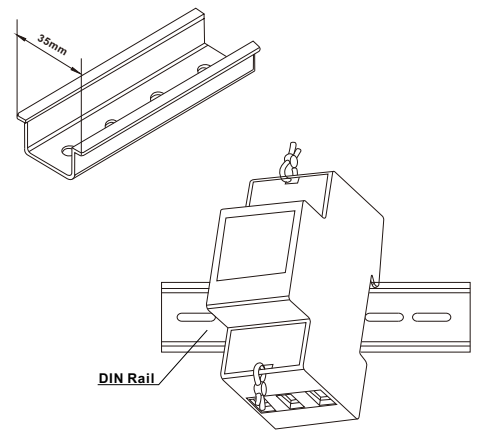


6.Wiring diagram


6.1 A-100M / MT

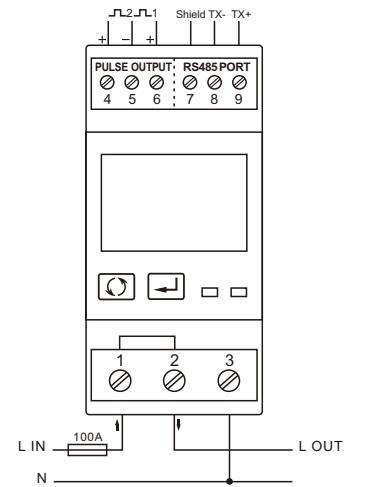

6.2 A-100P

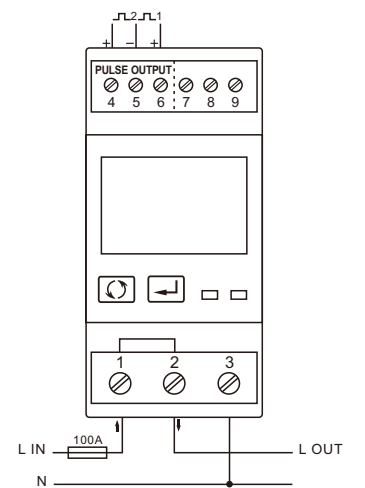

6.3 A-100M-B

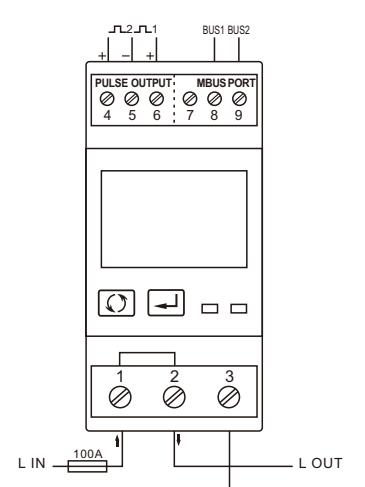

Autometers Systems Ltd
4B Albany Road, Manchester, M21 0AW
Tel:00 (44) 0161 861 9056
Fax:00 (44) 0161 881 3745
Web:autometers.co.uk

